



PULSATING BRAKE LIGHT CONTROLLER 908

FITS ALL GL1500 AND GL1800 MODELS; COMPATIBLE WITH BOTH STANDARD BRAKE LIGHT BULBS AND LEDS

PARTS INCLUDED

- 1 Pulsating Brake Light Controller
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

TOOLS SUGGESTED

Small flat blade screwdriver, wire cutters, and test light.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all steps in the procedure; consult a trained technician.

CAUTION! DO NOT OVERLOAD THE CONTROLLER. MAXIMUM LOAD FOR THE CONTROLLER IS 150 WATTS, TYPICALLY SIX 25W STANDARD BRAKE LIGHT BULBS. THE CONTROLLER IS ALSO COMPATIBLE WITH LED LIGHTS AS LONG AS THE MAXIMUM LOAD IS NOT EXCEEDED.

PROCEDURE

STEP 1 Before installing the controller, be sure the maximum load will not exceed 150 watts. Check your service manual for total brake light wattage; also remember to include the wattage of any aftermarket brake lights when determining the total brake light wattage.

ATTENTION! STEP 2 through STEP 4 refer specifically to 1800 models. For 1500 models, refer to your factory service manual.

STEP 2 Remove the backrest and seat; refer to your factory service manual for detailed instructions.

STEP 3 Locate the brake light wiring harness. Turn on the ignition and activate the brake lights. Disconnect and reconnect the wiring connectors until the brake light goes out.

STEP 4 Locate the brake light power wire in the connector; refer to your factory service manual for the correct terminal number or wire color.

STEP 5 Clip the wire apart about four inches away from the connector. Strip both ends of the brake wire.

STEP 6 Insert the wire end from the connector into the "brake input" terminal of the brake light controller. Tighten the terminal screw against the wire. See PIC.1

-cont.-



CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 7 Insert the wire end from the taillight into the "output to bulbs" terminal of the brake light controller. Tighten the terminal screw against the wire. See [PIC.1](#).

STEP 8 Connect a ground wire from the ground terminal on the controller to the chassis. Refer to [PIC.2](#).

STEP 9 Check the brake lights for proper operation. When the brake is applied, the brake lights should flash for approximately four seconds then illuminate steady.


Ride On!

Kuryakyn

PIC.2



FIG.1

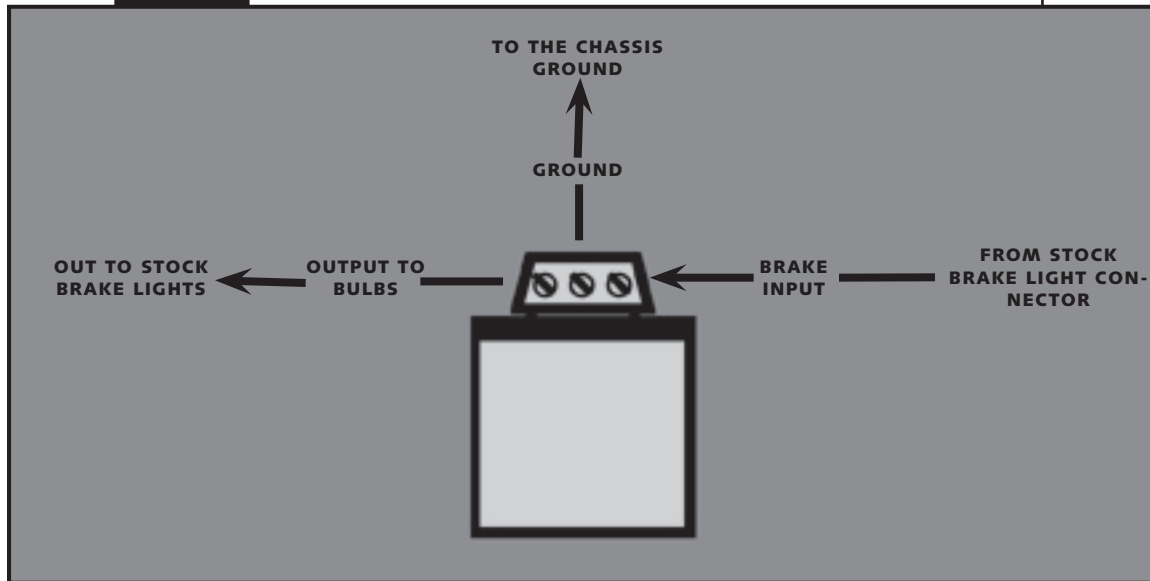

PAGE

2