

## INCLUDED PARTS

No.	Description	Qty.
1	Lower Trunk Organizer	1
2	5 mm Screw	5
3	Push Pins	5
4	Tabs	5
5	Installation Instructions	1

**REQUIRED TOOLS:** Phillips Screwdriver, Torque Wrench

## TORQUE CHART

Tighten screws to their specified torque values. Refer to the service manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
5 mm screw	4.2	0.4	3.1

## MAXIMUM LOADING CAPACITY

The weight of the cargo must not exceed the following maximum loading capacity:

Maximum Loading Capacity	
Lower Trunk Organizer	1.0 lb (0.45 kg)

**NOTE:** Before the install, you must use the provided push pins to attach the tabs that secure the organizer inside the trunk.




## INSTALLATION

1. Open the rear trunk lid

**Perform these steps on GL1800DA only**

2. Remove USB cord from trunk holder
3. Remove the trunk holder
4. Install 5mm screws

5. Install the trunk lid organizer as shown

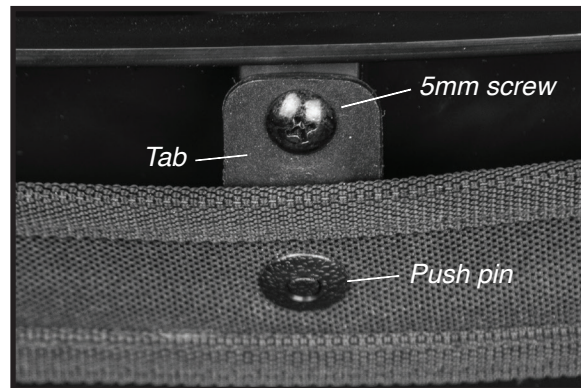

For customer service & technical support please contact:

WingStuff.com | Phone: 949.454.2199 | Email: customerservice@wingstuff.com