

INSTALLATION INSTRUCTIONS

PART NO. 21-358BK

BLACK COMMANDER HWY BOARDS

FITMENT: HONDA GOLDWING/GOLDWING TOUR 2018-NEWER

5/23/2019

TOOLS NEEDED: 6MM ALLEN WRENCH

5MM ALLEN WRENCH





3MM ALLEN WRENCH


8MM ALLEN WRENCH

REMOVABLE THREAD LOCK

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING. *USE REMOVABLE THREAD LOCK ON ALL FASTENERS***ESTIMATED INSTALLATION TIME: 45 TO 60 MIN.****INSTALLATION:**

1. STARTING ON THE LEFT SIDE OF THE BIKE, REMOVE THE TWO SCREWS IN **FIG. 1**. PULL FORWARD ON THE LEFT FOG LIGHT COVER TO REMOVE IT.
2. USE A 5MM ALLEN WRENCH TO REMOVE THE TWO ALLEN SCREWS IN THE LEFT LOWER COWL (**FIG. 2**).
3. PULL BACK SLIGHTLY ON THE REAR OF THE LEFT LOWER COWL TO RELEASE IT.
4. USING **FIG. 3** AND **FIG. 5** FOR REFERENCE, CAREFULLY RELEASE THE LEFT LOWER COWL TAB FROM THE LOWER SHROUD.
5. RELEASE THE RUBBER GROMMET IN THE CENTER OF THE LEFT LOWER COWL (**FIG. 4**).
6. SLIGHTLY PULL OUT ON THE BACK AND BOTTOM OF THE LEFT LOWER COWL AND SLIDE IT FORWARD AND OUT TO RELEASE THE TAB HOLDING THE FRONT OF THE LOWER COWL. REMOVE THE LEFT LOWER COWL AND PLACE IT ON A CLEAN TOWEL OR SOFT SURFACE TO AVOID SCRATCHING.
7. REMOVE THE TWO CLIPS FROM THE ENGINE GUARD COVER (**FIG. 5** SHOWS INSIDE OF THE LEFT LOWER COWL) CLIPS WILL NOT BE REUSED.
8. PRESS THE THREE TABS INSIDE THE LOWER COWL TO RELEASE THEM AND REMOVE THE ENGINE GUARD COVER. COVER WILL NOT BE REUSED.
9. PLACE ONE OF THE CLAMP TOPS ON THE ENGINE GUARD AS SHOWN IN **FIG. 6**.
10. REPEAT STEPS 1 THROUGH 6 IN REVERSE ORDER.
11. REFERENCE **FIG. 6** TO INSTALL THE CLAMP BOTTOM AND THE LEFT COMMANDER HIGHWAY BOARD. (DO NOT TIGHTEN. CLAMP CAN MOVE FORWARD OR BACK SLIGHTLY TO ADJUST POSITION/ANGLE OF THE BOARD) ONCE IT IS IN PLACE, TIGHTEN ALL BOLTS AND THE SET SCREW.
12. REPEAT ON THE RIGHT SIDE.

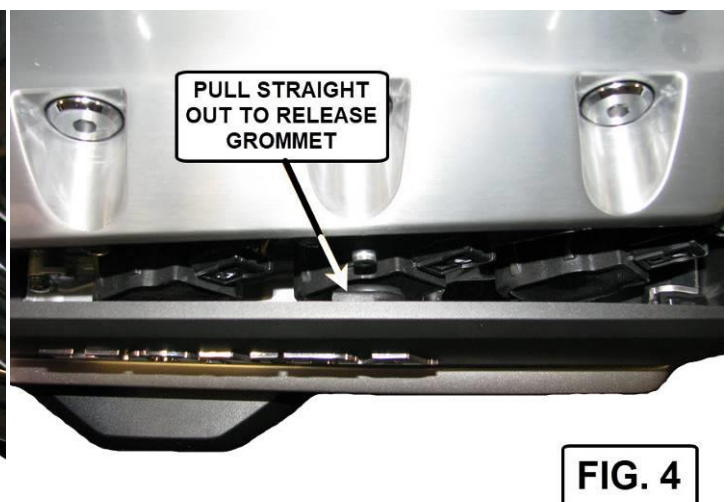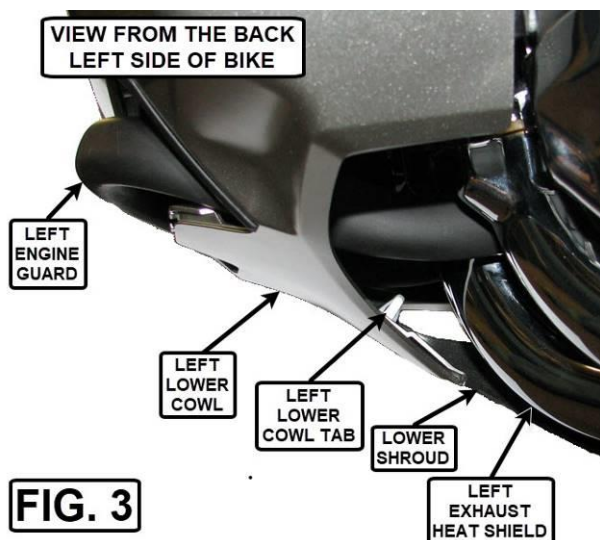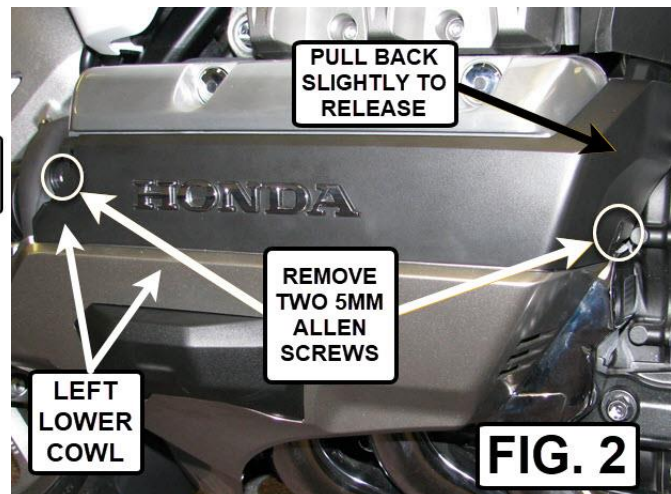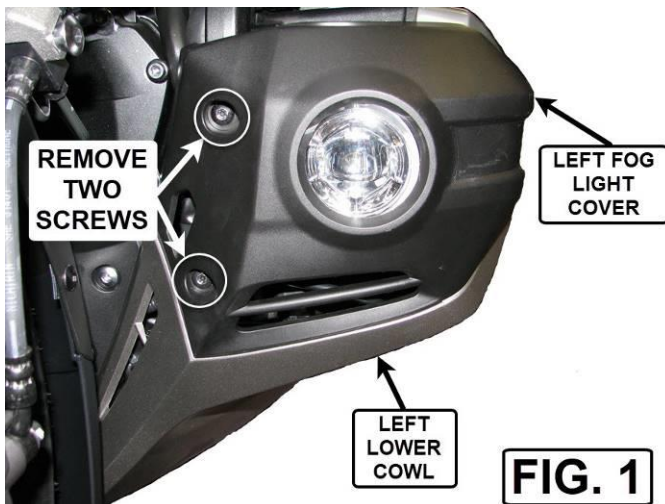

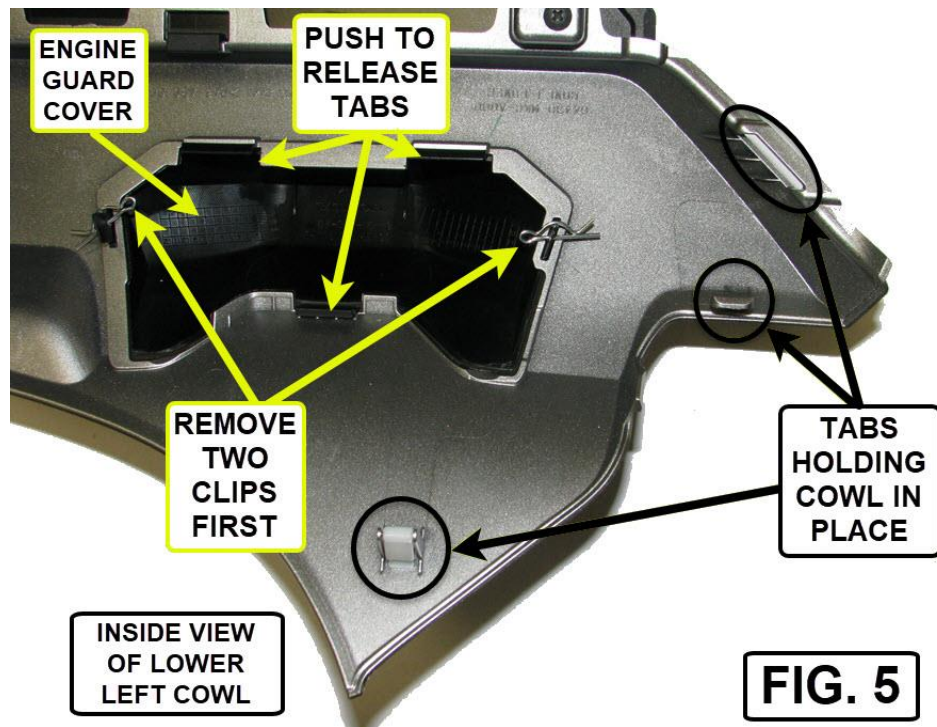

NOTICE

THIS SET CONTAINS EXTRA
HARDWARE ITEMS THAT WILL
NOT BE USED FOR THIS
INSTALLATION

LEFT SIDE SHOWN

