

## INSTALLATION INSTRUCTIONS

### OMNI L.E.D. REAR SADDLEBAG ACCENTS FOR GL1800

3262

#### THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

**WARNING** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

**NOTICE**

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

#### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Left Accent (clutch side)
- 1 Right Accent (brake side)

#### YOU WILL ALSO NEED:

Metric hex wrench set, Phillips screw driver, electric drill, 7/16" drill bit, masking tape, blue loctite, clean rag and warm soapy water

**NOTICE**

THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

**NOTE: THIS PART REQUIRES KURYAKYN WIRING ADAPTER P/N 3268 (SOLD SEPARATELY) FOR PLUG & PLAY INSTALLATION.**

**NOTICE**

THIS PART WILL REQUIRE DRILLING INTO OEM PARTS. BE SURE TO MEASURE TWICE, DRILL ONCE, AND ALWAYS DOUBLE CHECK THE REFERENCE MARKS MADE BEFORE DRILLING.

**WARNING**

A FACTORY SERVICE MANUAL WILL BE HELPFUL IN PERFORMING THIS INSTALLATION. DO NOT ATTEMPT TO PERFORM THIS INSTALLATION IF YOU ARE NOT CONFIDENT IN YOUR ABILITY TO COMPLETE ALL OF THE STEPS IN THE PROCEDURE; CONSULT A TRAINED TECHNICIAN. IMPROPER INSTALLATION COULD RESULT IN SERIOUS INJURY OR DEATH.

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

**STEP 2** Refer to PIC 2. Open the saddlebags to remove the side covers. Unfasten, disconnect, and remove the seat. Set the seat, side covers, and all hardware aside, they will be reused.

**STEP 3** Remove the main fuse.

**STEP 4** Refer to PIC 3. Locate and disconnect the left and right saddlebag sub harness connectors.

*Note: Refer to your motorcycle's service manual for assistance.*



## INSTALLATION INSTRUCTIONS

### OMNI L.E.D. REAR SADDLEBAG ACCENTS FOR GL1800

3262

-CONTINUED-

**STEP 5** Refer to PIC 4. Locate the Wiring Adapter Kit (P/N 3268, sold separately). Connect the left and right adapter to the corresponding saddlebag sub harness connectors that were disconnected in Step 4.



PIC 4

**STEP 6** Locate provided Left and Right Accents. Connect the left accent to a left wiring adapter connector and the right accent to a right wiring adapter connector.

**STEP 7** Reinstall main fuse and test lights for proper run/turn/brake operations. Disconnect wires after operational testing. Set them aside for the time being. Remove main fuse.



PIC 5

**STEP 8** Refer to PIC 5. Unfasten Rear Fender A from the rear of the motorcycle and disconnect the license plate light. Remove Rear Fender A from the motorcycle. Apply a small amount of blue loctite to the threads of the fasteners that were removed. Set the assembly and mounting hardware aside, they will be reused.



PIC 6

**STEP 9** Refer to PIC 6. Starting on the right (brake) side. Open the saddlebag. Remove fasteners located along the rear outside edge of the saddlebag: three (3) fasteners along the painted edge, one (1) fastener above the rear saddlebag cover, and one (1) pop rivet located at the bottom of the plastic cover base. Apply a small amount of blue loctite to the threads of the fasteners that were removed, but not to the plastic rivet. Set all hardware aside, it will be reused.

**STEP 10** Refer to PIC 7. At the rear of the motorcycle, unfasten the hardware securing the top inner tab of the rear saddlebag cover. Below the tab, and on the underside of the saddlebag, remove hardware securing the cover. Apply a small amount of blue loctite to the threads of the fasteners that were removed. Set all hardware aside, it will be reused.



PIC 7

**STEP 11** Refer to PIC 8. Remove the rear saddlebag cover from the saddle bag. Set it aside on a flat clean surface.



PIC 8

#### NOTICE

**MEASURE TWICE – DRILL ONCE. DOUBLE CHECK ALL REFERENCE MARKS MADE ON THE TRUNK LID BEFORE DRILLING. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS DAMAGED AS A RESULT OF THIS INSTALLATION**

## INSTALLATION INSTRUCTIONS

### OMNI L.E.D. REAR SADDLEBAG ACCENTS FOR GL1800

3262

-CONTINUED-

- STEP 12** Refer to PIC 9. Apply masking tape to the upper corner of the rear saddlebag cover along the curvature, where it will be drilled through, to prevent the paint from chipping or flaking away. Be sure to cover the whole area, not just the drill point.
- STEP 13** Refer to PIC 10. Locate provided Right (brake side) Accent Light. Align the outside edge of the accent with the curvature of the rear saddlebag cover.
- STEP 14** Refer to PIC 11. Draw an outline around the upper portion of the accent. Tilt accent onto it's edge, along the curvature. Measure placement of the wires on the backside of the light, and mark it accordingly within the outline on the tape. Double check the placement of the mark made BEFORE drilling.
- STEP 15** Drill a small pilot hole on the mark made for the accent light's wire. Drill all the way through the cover. Increase the drill hole to a 7/16 inch hole.
- STEP 16** Test fit that the wire of the accent goes through the drilled hole. If the wire does not fit in the drilled hole, make small adjustments to it. Test again. Repeat process until the wire fits into the drilled hole. **DO NOT OVER DRILL AND MAKE THE HOLE TOO LARGE!**
- STEP 17** Refer to PIC 12. Remove tape from rear saddlebag cover. Thoroughly clean the trunk surface.



#### NOTICE

**ENSURE PROPER ADHESION OF THIS PRODUCT. REMOVE ALL GREASE, OIL, BUGS, DIRT, AND OTHER DEBRIS (INCLUDING WAX AND POLISH) FROM THE INSTALLATION AREA. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST OR DAMAGED DUE TO IMPROPER INSTALLATION.**

**DO NOT ATTEMPT THIS INSTALLATION IN TEMPERATURES BELOW 50°F (10°C). PROPER ADHESIVE BONDING ONLY OCCURS ABOVE 50°F (10°C).**

- STEP 18** Use your fingernail to rub the adhesive backing on the accent; this will activate the adhesive. Remove and discard the backing.
- STEP 19** Refer to PIC 13 and 14. Feed the wire through the drilled hole, and align the accent with the curvature of the rear saddlebag cover; press into place for one minute; full bonding will occur after 24 hours.

*Note: If the bike is going to be operated before full bonding occurs, secure the accent to the bike with a good quality masking or painter's tape.*

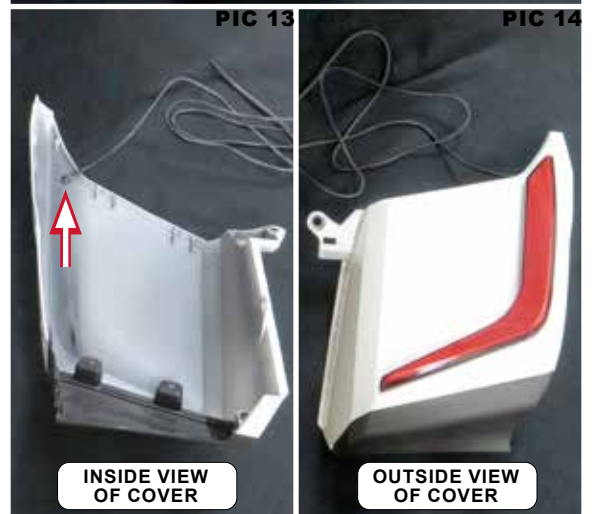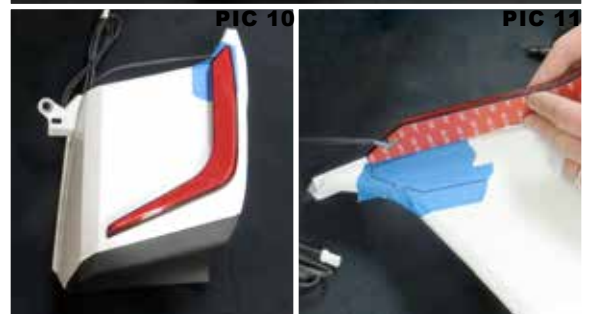



## INSTALLATION INSTRUCTIONS

### OMNI L.E.D. REAR SADDLEBAG ACCENTS FOR GL1800

3262

-CONTINUED-

**STEP 20** Refer to PIC 15. Locate hardware that was removed in Step 9 and 10, for securing the rear saddlebag cover to by bike. Reinstall the rear saddle bag cover. Fully tighten hardware.

**STEP 21** Repeat Steps 2 through 20 on the left (clutch) side for the Left Accent.

**STEP 22** Route the accent light wires up through the back side of the saddlebag along the inside of the rear fender, and up to the under seat area to connect it to the adapter. Do not secure the wires to anything yet.

*Note: Use a firm straight wire, straightened out wire coat hanger, or some other sturdy tool. Route it through an opening from under the seat area out towards the rear of the bike. Tape the white plug and some of the wire from the accent to it and carefully pull it up to the under seat area.*

**STEP 23** Refer to PIC 16. Connect the wires of the lights to their corresponding wire adapters.

**STEP 24** Refer to PIC 17. Reinstall main fuse and test lights for proper run/turn/brake operations.

**STEP 25** Secure the wires in a safe place. Be sure to fasten the wires where they won't pinch, pull, or be damaged.

**STEP 26** Refer to PIC 18. Reinstall the Rear Fender A that was removed in Step 8.

**STEP 27** Reinstall the side covers and seat, using the hardware that was removed in Step 2.

#### NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



PIC 15



PIC 16



PIC 17



PIC 18

## INSTALLATION INSTRUCTIONS

### OMNI L.E.D. REAR SADDLEBAG ACCENTS FOR GL1800

3262

-CONTINUED-

#### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
6. All warranty claims must be directed to the place of purchase. Merchandise sold through internet auction sites or any other unauthorized reseller shall not carry a Kuryakyn warranty. If unsure, please contact the place of purchase to verify they are an authorized Kuryakyn reseller.

#### RETURN POLICY

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.

©2015 KURYAKYN HOLDINGS, LLC ALL RIGHTS RESERVED

KURYAKYN, KURYAKYN K logo and the marks appearing on this instruction sheet are registered and common law trademarks of Kuryakyn Holdings except noted third-party trademarks. A full listing of trademarks and trademark registrations owned by Kuryakyn Holdings can be found at [www.kuryakyn.com/legal-notice](http://www.kuryakyn.com/legal-notice).

Emissions Notice: The California Air Resources Board (CARB) does not permit the use of aftermarket emission-related parts(s) that alter the performance of OEM emission-related devices unless CARB has issued an Executive Order, other than on racing vehicles on closed courses. Check your local laws and manufacturer's information.

Listed Manufacturers and product model names are for reference only. All product and company names are trademarks or registered trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them. All specifications are subject to change without notice.

For additional information on third-party product and company names, please consult our Web page at [www.kuryakyn.com/legal-notice](http://www.kuryakyn.com/legal-notice)