

Copyright © 2021 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 52-964

HELMET LOCK EXTENSION

FITMENT: HONDA GL1800 2018-NEWER, CAN-AM RT/LTD 2020-NEWER

1/7/2021

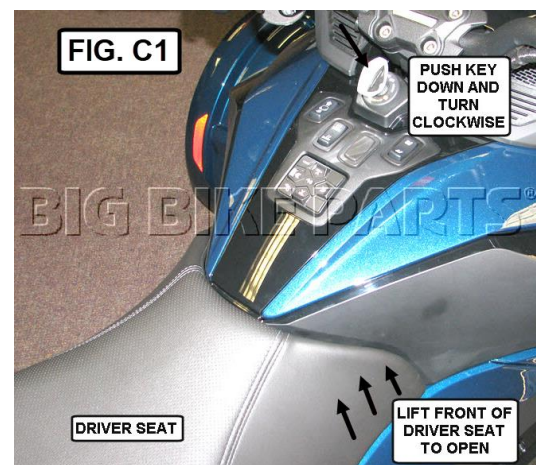
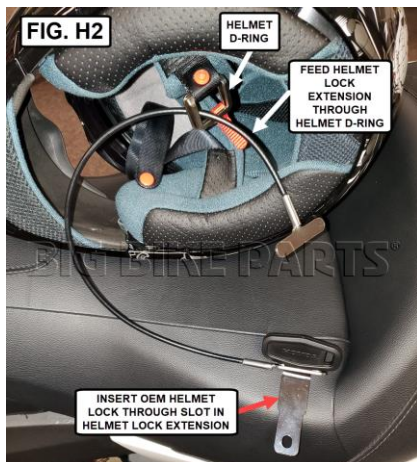
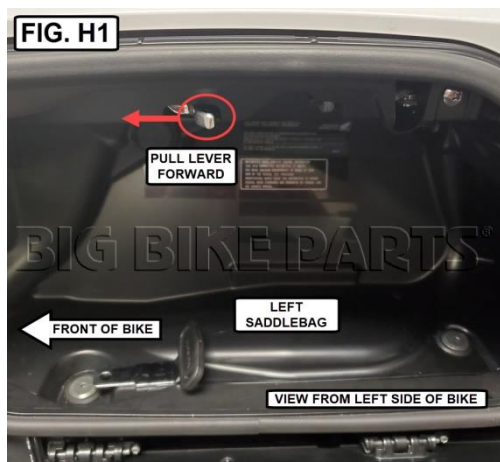
TOOLS NEEDED:

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.**ESTIMATED INSTALLATION TIME: 5 TO 10 MIN.****INSTALLATION GL1800:**

1. OPEN THE LEFT SADDLEBAG.
2. RELEASE THE HELMET LOCK PIN BY PULLING THE LEVER FORWARD INSIDE THE LEFT SADDLEBAG (FIG. H1).
3. FEED THE SLOTTED END OF THE HELMET LOCK EXTENSION THROUGH THE D-RING ON YOUR HELMET (FIG. H2).
4. INSERT THE OEM HELMET LOCK THROUGH THE SLOT IN THE HELMET LOCK EXTENSION (FIG. H2). (THE RUBBER GROMMET IS NOT USED IN THIS INSTALLATION.)
5. INSTALL THE OEM HELMET LOCK IN THE PASSENGER HANDLE AND LOCK IN PLACE BY PUSHING IN ON THE HELMET LOCK PIN (FIG. H3).
6. CLOSE THE SADDLEBAG.

INSTALLATION SPYDER RT/LTD:

1. OPEN THE DRIVER SEAT BY PUSHING THE KEY IN AND TURNING CLOCKWISE (FIG. C1).
2. LIFT UP ON THE FRONT OF THE DRIVER SEAT.
3. FEED THE SLOTTED END OF THE HELMET LOCK EXTENSION THROUGH THE D-RING ON YOUR HELMET (FIG. C2).
4. INSERT THE SLOT ON THE HELMET LOCK EXTENSION OVER THE OEM HELMET LOCK TAB ON THE RT (FIG. C2).
5. INSTALL THE RUBBER GROMMET OVER THE END OF THE OEM HELMET LOCK TAB TO SECURE THE HELMET LOCK EXTENSION (FIG. C3).
6. CLOSE DRIVER SEAT.

**NOTICE**

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.

NOTICE

THIS SET CONTAINS EXTRA HARDWARE ITEMS THAT WILL NOT BE USED FOR THIS INSTALLATION