

## TWINART™ LED VERTICAL VEN TRIM 390/395

**Parts included:**

LEFT SIDE LED LIGHT-----	1
RIGHT SIDE LED LIGHT-----	1
INSTALLATIOIN KIT -----	1

**WARNING:**

Ignoring the instruction may result in potential serious injury, death or material damage.

**Limited Warranty:**

Products are warranted to be free of defects in material and workmanship for 1 (one) year from date of purchase by the consumer.

Customer must show proof of purchase for warranty.

Twinart shall not be liable for any consequential and incidental damages.

The products must be installed properly and operated under normal conditions.

1. Park on a level surface and shut off the motorcycle. Lift motorcycle onto its center stand if available. Ensure the engine has time to cool before installation.

2. Remove Seat. To familiarize yourself with the functions of the lights plug them into the Goldstrike™ Rear Lighting Harness #48000.

Turn on the motorcycle ignition and then operate the left and right signals to observe the lights. Unplug them and set aside.


3. Clean the front of the fairing with hot water and soap to remove all dirt and debris.

4. ATTENTION: Thoroughly clean the mounting surface with denatured alcohol to remove all wax, oil, and residue.

NOTE: New motorcycles are delivered from the factory covered in protective oil. Remove it before installing this product.

NOTE: Do not install if the temperature is below 50° F. The adhesive will not cure properly. (FIG.1)

5. Test fit the left and right vent trim to familiarize yourself with its natural location. The vent trim is designed to fit at the edge of the black plastic inner fairing. (FIG.2)

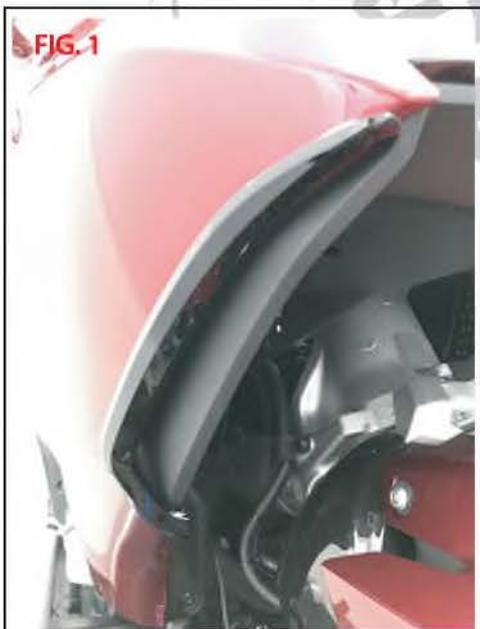

### TWINART™ LED VERTICAL VEN TRIM 390/395



#### WARNING:

Ignoring the instruction may result in potential serious injury, death or material damage.

#### Limited Warranty:



Products are warranted to be free of defects in material and workmanship for 1 (one) year from date of purchase by the consumer.

Customer must show proof of purchase for warranty.


Twinart shall not be liable for any consequential and incidental damages.

The products must be installed properly and operated under normal conditions.

6. Apply the adhesion promoter according to the instruction on its container onto left and right side mounting locations. (FIG.1)
7. Remove the red adhesive backing and install the vent trim. Press the vent trim firmly onto the surface for 60 seconds. The adhesive cures within 24 hours.
8. Install a zip tie holder. (FIG.3)
9. Route the connector and wire into the fairing and out at the top front of the engine. (FIG.4)
10. Tuck the wire up over the top of the injector covers. (FIG.5)
11. Remove the socket head screw holding the black panel over the frame.(FIG.7) Tuck the wire up under the cover. (FIG.6)

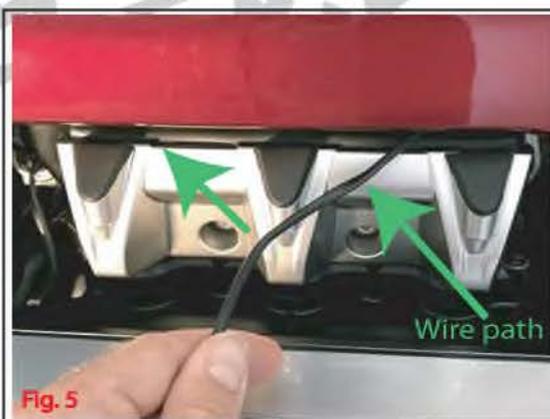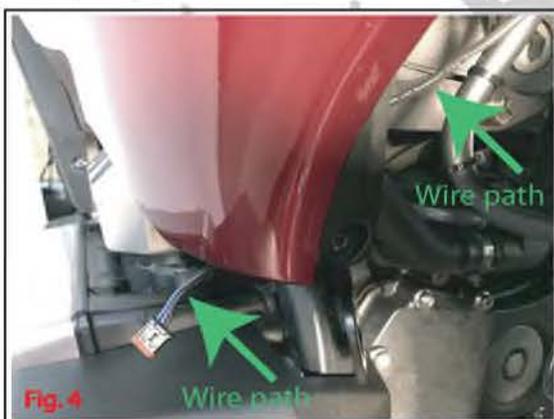

### TWINART™ LED VERTICAL VEN TRIM 390/395

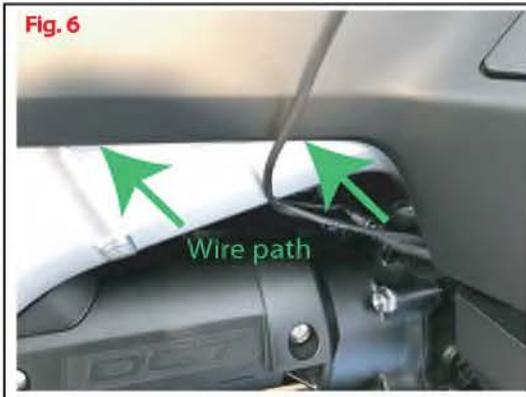

#### WARNING:

Ignoring the instruction may result in potential serious injury, death or material damage.

#### Limited Warranty:

Products are warranted to be free of defects in material and workmanship for 1 (one) year from date of purchase by the consumer.

Customer must show proof of purchase for warranty.

Twinart shall not be liable for any consequential and incidental damages.

The products must be installed properly and operated under normal conditions.

12. Plug in your connectors to the Goldstrike™ Rear Lighting Harness part #48000, matching the color of the wires to the correct side.
13. Tuck the wires towards the rear fender so they will not be crushed by the seat.
14. Test the light for run and turn function.
15. Repeat for the other side.
16. Re-install your seat, backrest, and any other parts removed during installation.