




## Goldstrike™ Frame Covers for Gold Wing

### Parts Included:

- 1 Left Side Frame Cover Assembly
- 1 Right Side Frame Cover Assembly
- 1 Hardware Kit

### Installation Instructions:

1. Park on a level surface and shut off the motorcycle. Ensure that the engine has time to cool before installation. Place on center stand if available.
2. Remove OEM swingarm pivot cover. Screws will not be reused. (Fig. 1)

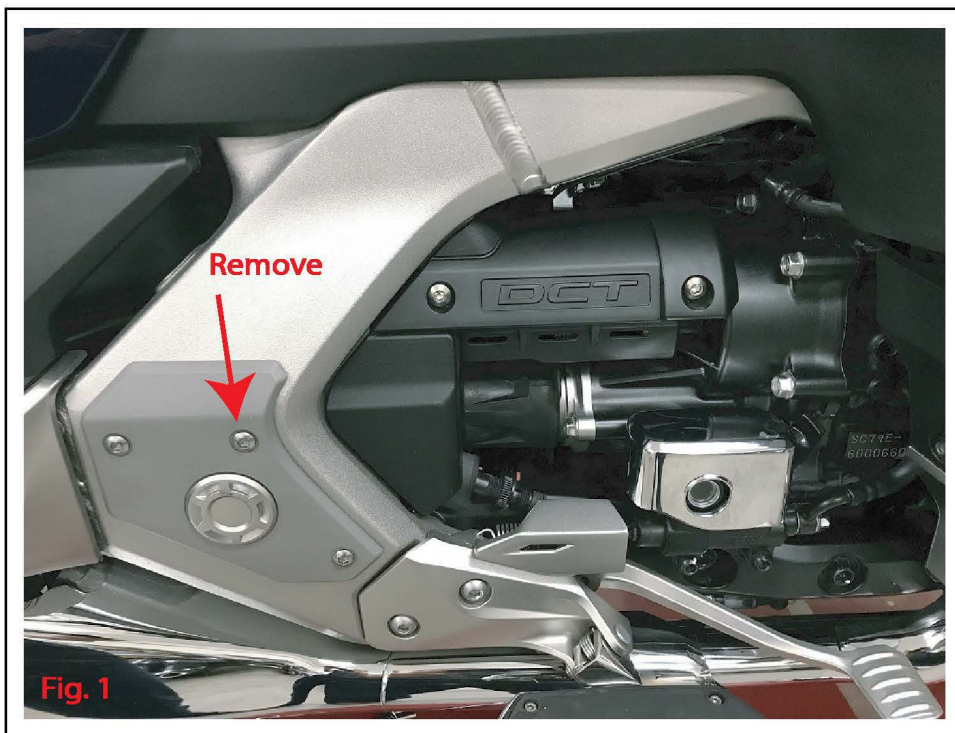

3. Determine correct orientation for the left and right sides of the motorcycle. Test fit covers over frame. It may be necessary to temporarily loosen or adjust surrounding body panels.
4. The frame covers have a piece of adhesive foam tape applied to the back side. The installer can choose to remove the tape backing and stick the covers in place; or to aid in future service or cleaning, just utilize the tape as a foam pad, and NOT remove the backing. The adhesive is not critical to the fitment of the frame cover.

### WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

### CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

### ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

### NOTE:

Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit our website [Ciro3d.com](http://Ciro3d.com) for our complete warranty policy.

5a. Re-install the swing arm covers over the frame covers using the included screws and straight sleeves. Loosely assemble each screw to ensure the sleeves are lined up in each hole before final tightening. Torque to 5.2 N-m, 3.8 ft-lbs. Do not overtighten. (Fig. 2)

5b. If installing the Goldstrike Adjustable Passenger Comfort Pegs; you will need to substitute the straight sleeves for the included "top-hat" spacers included with the frame cover kit. The spacers will be inserted into the arm mounting plates. Torque to 5.2 N-m, 3.8 ft-lbs. Do not overtighten. (Fig. 3 & 4)

6. Repeat for the opposite side.

