



INSTALLATION

L.E.D. RUN-TURN-BRAKE SPOILER LIGHT for GL 1800 3226

PARTS INCLUDED

- 1 L.E.D. Run-Turn-Brake Auxiliary Spoiler Light—Clear Lens
- 3 Installation Kit, Including,
 - 1 Run-Turn-Brake Light Harness (Small—2 Wire)
 - 1 Run-Turn-Brake Light Harness (Large—3 Wire)
 - 6 Nylon Cable Ties
 - 2 Dielectric Grease Packs
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Metric Hex Wrenches, Pliers, Tape, Screwdrivers

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.


ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all of the steps in the procedure; consult a trained technician.

STEP 2

Open the trunk lid. Remove all fasteners holding the inner trunk panel to the trunk lid.

STEP 3

Locate the white 2-pin connector that the stock spoiler light connects to. PIC 1
Disconnect the wires.

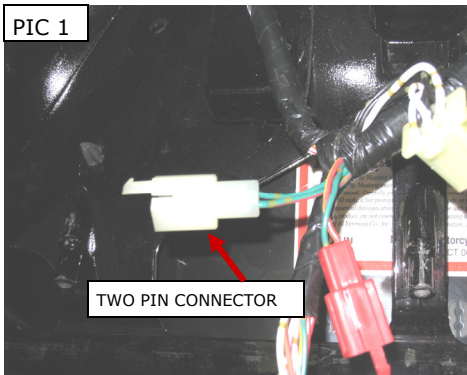

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge.

Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025.
Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.



kuryakyn.com

-cont.-

3226-21GL-1011

STEP 4 Remove the 2 screws (PIC 2) securing the stock spoiler light to the spoiler. With the wires disconnected, pull the light and wiring out of the spoiler.

STEP 5 Tape the connectors of the Run-Turn-Brake Spoiler Light wiring together (PIC 3) and route the wiring through the hole in the spoiler. PIC 4

STEP 6 Feed the wiring through the spoiler and out the hole drilled through the trunk lid to the spoiler. It may help to use a guide wire to route the harness. The controller will stay in the spoiler behind the light. Replace the fasteners (from Step 4) securing the Spoiler Light in place.

STEP 7 Connect the Small 2-wire Harness included in the kit to the plug from Step 3. Use dielectric grease on all electrical connections.

ATTENTION! Küryakyn recommends the use of dielectric grease on electrical connections.

STEP 8 Remove the four fasteners securing the rear center panel. PIC 5

NOTE: Older models may have one fastener behind the license plate.

STEP 9 Locate the 3-wire **RED** connector and disconnect. PIC 6 Take the Large 3-wire Harness and connect the **black/white** wire sub-harness between the **RED** connectors. PIC 6 Use dielectric grease on all electrical connections.

STEP 10 Locate the 3-wire **BLUE** connector and disconnect (PIC 7). Take the Large 3-wire Harness and connect the **black/yellow** wire sub-harness between the **BLUE** connectors. PIC 7 Use dielectric grease on all electrical connections.

ATTENTION! Küryakyn recommends the use of dielectric grease on electrical connections.

STEP 11 Route the 3-wire harness up to the trunk lid following the main harness. It may be helpful to use a guide wire and remove the seat base.

STEP 12 Match the connectors from the 3-wire harness to the remaining three wires from the Run-Turn-Brake Spoiler Light color to color. Use dielectric grease on all electrical connections. Test all the functions of the new Run-Turn-Brake Spoiler Light and the rear motorcycle lights.







WARNING! ENSURE PROPER TAIL LIGHT AND TURN SIGNAL OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. TAIL LIGHT OR TURN SIGNAL MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

STEP 13 Tuck all wires away from pinch points and heat.

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

STEP 14 Re-install the inner trunk panel and rear center panel and tighten all fasteners.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including preassembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

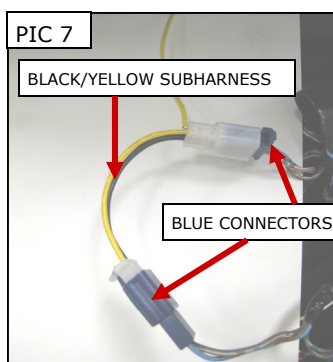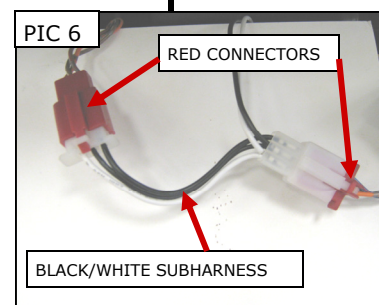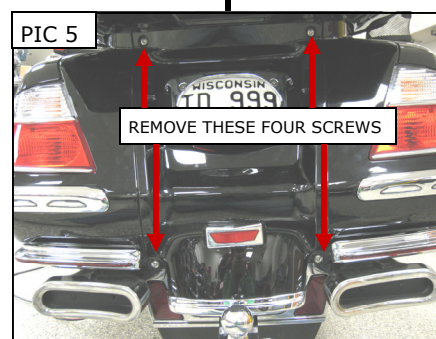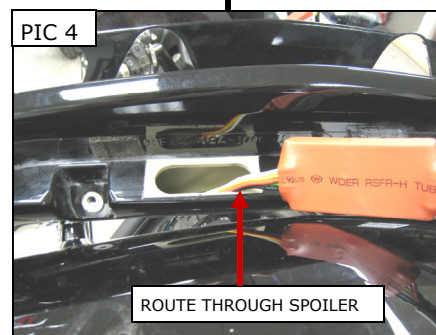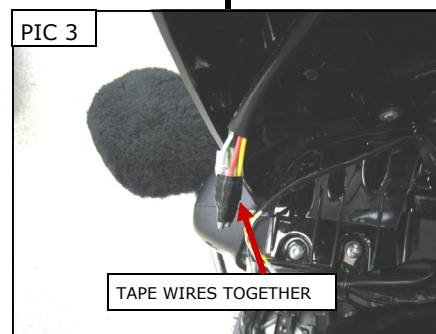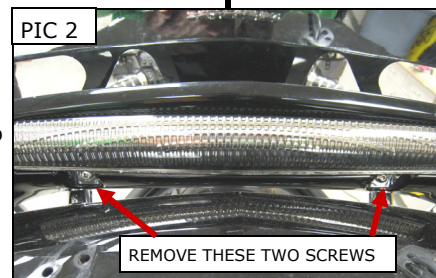

**PAGE
2**

Ride On!

LED R-T-B SPOILER LIGHT

INSTALLATION