



# INSTALLATION INSTRUCTIONS

## for PART 45-1629NUA

### GL1800 01-10 Air Intake Predator Grills

Read instructions thoroughly before installation.

1. Place bike on center stand.
2. Clean area thoroughly with alcohol pad provided.
3. Each Predator Grill© should have positioning marks at the end of each piece.



L bottom for Left Bottom  
 R bottom for Right Bottom  
 L top for Left Top  
 R top for Right Top

Left Top      Left Bottom      Right Top      Right Bottom

4. Position grills on fairing intake grill center bar where desired.




45-1629NUA Left Side



45-1629NUA

- 4A. On Add On part 45-1629NUB, Chrome Side fairing Accents with Mesh Inserts, the Predator Grills©'s tab will guide the positioning of the grill in the openings of the chrome mesh insert.

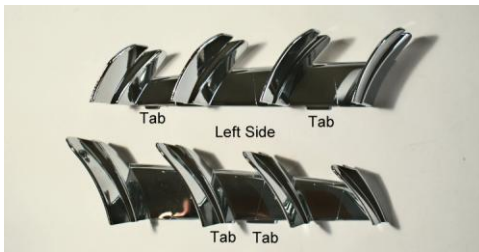

5. When positioning is complete, use the silicone provided to attach each Predator Grill©. Run a bead of silicone on the flat side of each grill. Work with one grill segment at a time. Carefully place each grill into position. Clean up any excess silicone. Using wire ties provided, secure Predator Grills© in place. Let grills set for 24 hours. Remove wire ties after drying.

