

Copyright © 2018 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 52-932

HIGHWAY TRIM LOWER COWL

11/14/2018

FITMENT: HONDA GOLDWING/GOLDWING TOUR-2018-NEWER

TOOLS NEEDED: 5MM ALLEN WRENCH

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.**ESTIMATED INSTALLATION TIME: 20 TO 30 MIN.****INSTALLATION:**

1. STARTING ON THE LEFT SIDE OF THE BIKE, REMOVE THE TWO 5MM SCREWS IN FIG. 1 AND PULL FORWARD ON THE FRONT COVER TO REMOVE IT.
2. REMOVE THE TWO 5MM ALLEN SCREWS IN THE LOWER COWL (FIG. 2).
3. PULL BACK SLIGHTLY ON THE REAR OF THE LOWER COWL TO RELEASE IT.
4. CAREFULLY PULL THE CENTER OF THE LOWER COWL OUT TO RELEASE THE RUBBER GROMMET (FIG. 3). (BE CAREFUL NOT TO TWIST OR PULL FRONT OF LOWER COWL YET).
5. USING FIG. 4 FOR REFERENCE, CAREFULLY RELEASE THE TAB HOLDING THE BOTTOM OF THE LOWER COWL IN PLACE.
6. SLIGHTLY PULL OUT ON THE BACK AND BOTTOM OF THE LOWER COWL AND SLIDE IT FORWARD AND OUT TO RELEASE THE TAB HOLDING THE FRONT TOP OF THE COWL. REMOVE THE COWL AND PLACE IT ON A CLEAN TOWEL OR SOFT SURFACE TO AVOID SCRATCHING.
7. REMOVE THE TWO CLIPS FROM THE COVER (FIG. 5 SHOWS INSIDE OF COWL). CLIPS WILL NOT BE REUSED
8. PRESS THE THREE TABS INSIDE THE COVER TO RELEASE THEM FROM THE COWL AND REMOVE THE COVER. COVER WILL NOT BE REUSED.
9. SET THE NEW TRIM PIECE IN PLACE PRESSING EACH TAB UNTIL IT SNAPS TO THE COWL (FIG. 6 SHOWN FROM INSIDE OF COWL).
10. REASSEMBLE LOWER COWL IN REVERSE ORDER.
11. MOVE TO THE RIGHT SIDE OF THE BIKE AND REPEAT STEPS 1 THROUGH 10 ON THE RIGHT SIDE.

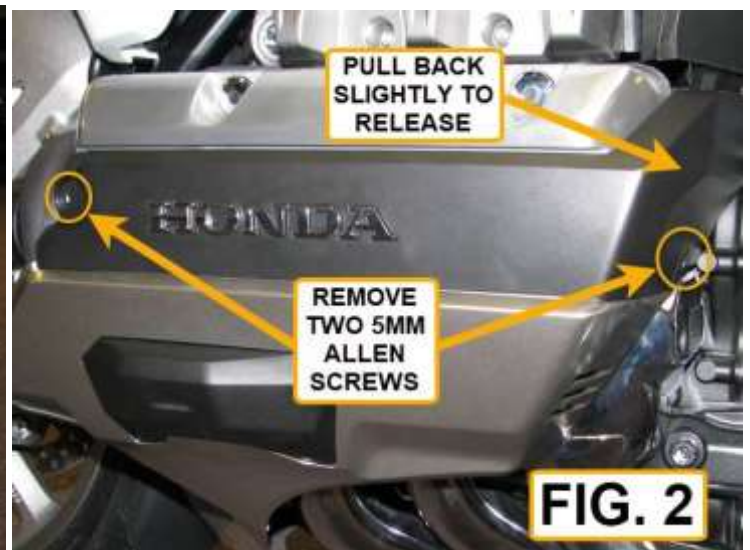




FIG. 3



FIG. 4

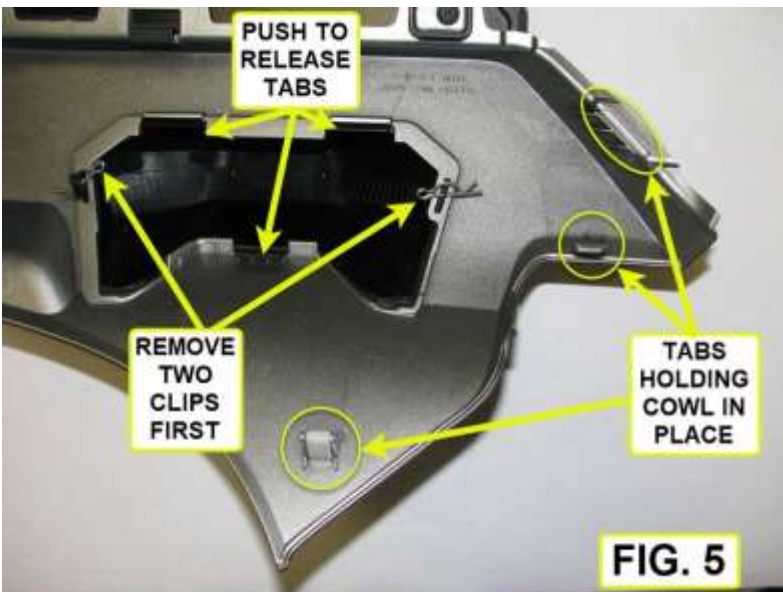


FIG. 5

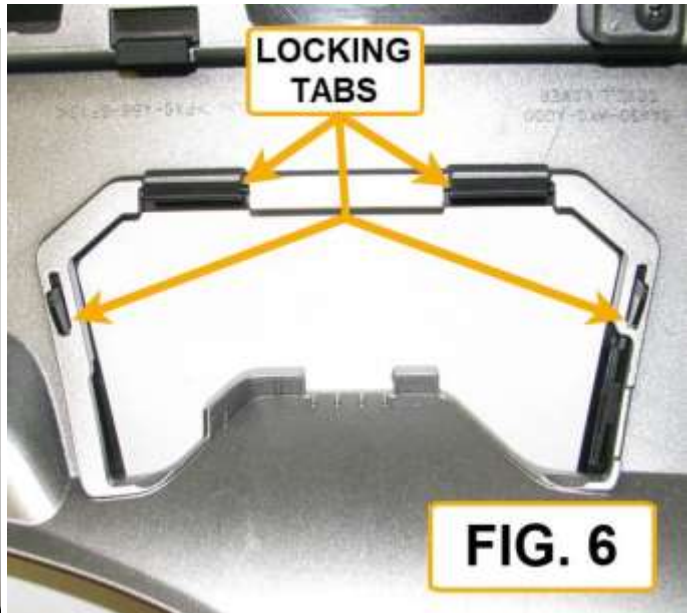


FIG. 6