BIG BIKE PARTS®

Copyright© 2019 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

1/2/2019

INSTALLATION INSTRUCTIONS

PART NO. 52-941/52-941BK	FRONT FENDER SIDE ACCENT
FITMENT:	HONDA GOLDWING/GOLDWING TOUR 2018-NEWER

TOOLS NEEDED:	MASKING TAPE	RUBBING ALCOHOL	CLEAN RAG		

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.
ESTIMATED INSTALLATION TIME: 15 TO 30 MIN.

INSTALLATION:

1. DETERMINE THE LEFT AND RIGHT FRONT FENDER ACCENTS USING **FIG. 1**. *SET THE RIGHT FRONT FENDER SIDE ACCENT ASIDE FOR NOW*.
2. PLACE MASKING TAPE ON THE LEFT SIDE OF THE FENDER AS SHOWN IN **FIG. 2**. (LEFT EDGE OF THE MASKING TAPE IS 1-9/16" FROM THE FENDER CORNER SHOWN IN **FIG. 2**)
3. PLACE A MARK 1/8" DOWN FROM THE FENDER EDGE AS SHOWN IN **FIG. 2**. (THE TOP OF THE FRONT FENDER SIDE ACCENT WILL LINE UP WITH THIS MARK WHEN INSTALLED)
4. CLEAN THE SIDE OF THE FRONT FENDER WHERE THE SIDE ACCENT WILL BE INSTALLED WITH RUBBING ALCOHOL AND A CLEAN RAG.
5. LET THE FRONT FENDER DRY COMPLETELY.
6. PEEL THE MASKING FROM THE BACK OF THE LEFT FRONT FENDER SIDE ACCENT.
7. SEE **FIG. 3** FOR PLACEMENT OF THE LEFT FRONT FENDER SIDE ACCENT.
8. CAREFULLY PRESS THE LEFT SIDE ACCENT INTO PLACE KEEPING THE TOP EDGE PARALLEL WITH THE EDGE OF THE FENDER (**FIG. 3**).
9. REPEAT ON THE RIGHT SIDE.
10. LET TAPE CURE FOR 24 HOURS BEFORE USING THE BIKE.

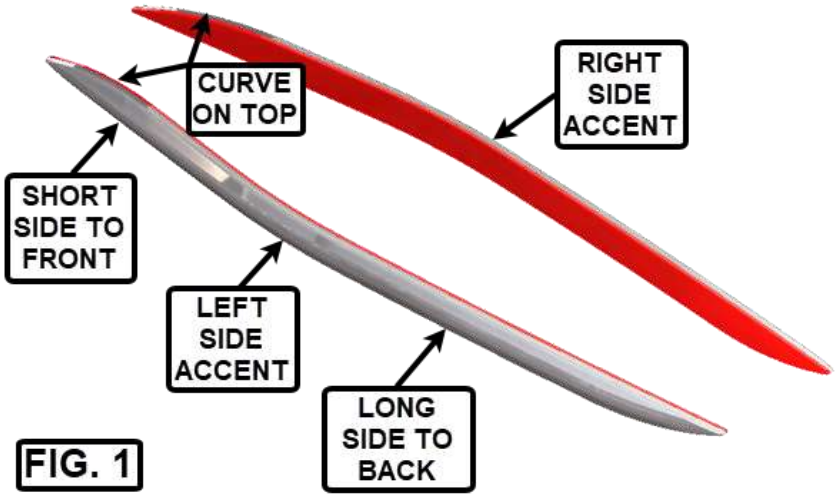

FIG. 1

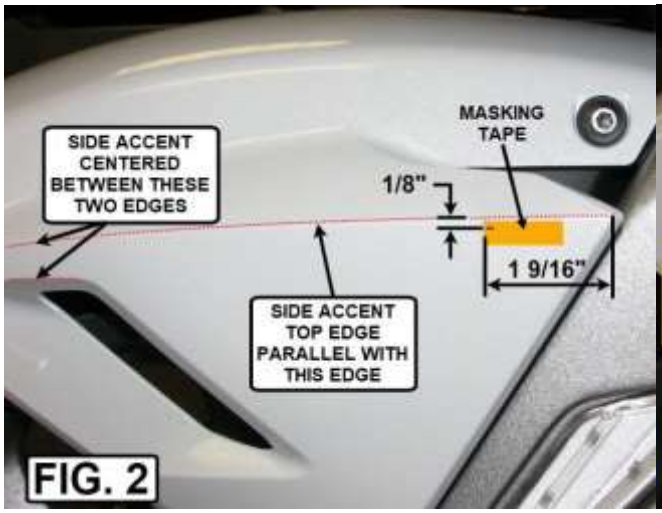

FIG. 2

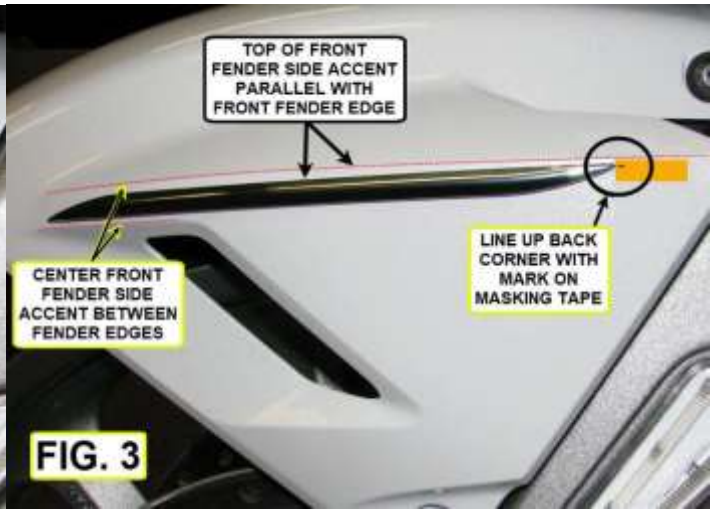

FIG. 3